

JBL EasySing Mics Compatibility Matrix

Models	EasySing Mics	Easy Sing Mic Mini*
	Compatibility	Compatibility
PartyBox Encore 2	✓	✓
PartyBox Encore Essential 2	✓	✓
PartyBox 120	✓	✓
PartyBox 320	✓	✓
PartyBox 520	✓	✓
PartyBox 720	✓	✓
PartyBox 130	✓	✓
PartyBox 330	✓	✓
Go 5		✓
Grip		✓
Flip 7		✓
Charge 6	✓	✓
Xtreme 5	✓	✓
Boombox 4	✓	✓

*Coming soon

How do you connect a PartyBox or speaker with the EasySing Mics?

Product	How to connect to the EasySing Mics
PartyBox Encore 2	Connect the dongle to the USB-C port
PartyBox Encore 2 Plus	Connect the dongle to the USB-C port
PartyBox Encore Essential 2	Connect the dongle to the USB-C port
PartyBox On-The-Go 2	Connect the dongle to the USB-C port
PartyBox On-The-Go 2 Plus	Connect the dongle to the USB-C port
PartyBox Club 120	Connect the dongle to the USB-A port using the A-C connector
PartyBox Stage 320	Connect the dongle to the USB-A port using the A-C connector
PartyBox 520	Connect the dongle to the USB-C port
PartyBox 720	Connect the dongle to the USB-C port
Charge 6	<ol style="list-style-type: none"> 1. Hold the Play button on the Charge 6, and plug the dongle to the USB-C port. 2. A tone will indicate the connection is established. 3. Connect Charge 6 via Bluetooth on the phone.
Xtreme 5	<ol style="list-style-type: none"> 1. Hold the Play button on the Xtreme 5, and plug the dongle to the USB-C port. 2. A tone will indicate the connection is established. 3. Connect Xtreme 5 via Bluetooth on the phone.
Boombox 4	<ol style="list-style-type: none"> 1. Hold the Play button on the Boombox 4, and plug the dongle to the USB-C port. 2. A tone will indicate the connection is established. 3. Connect Boombox 4 via Bluetooth on the phone.